


How to Download

1. Link PC to STB with RS-232 Cable

< RS232C Cable Connection >

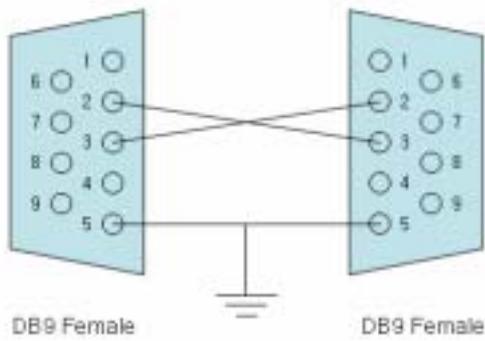

2. Run eMUpgrade Program

3. Check "Download"



3. Browse the file Location

4. Push "Start".



5. Turn off the STB and turn on.

6. STB will download the updated S/W from PC.